
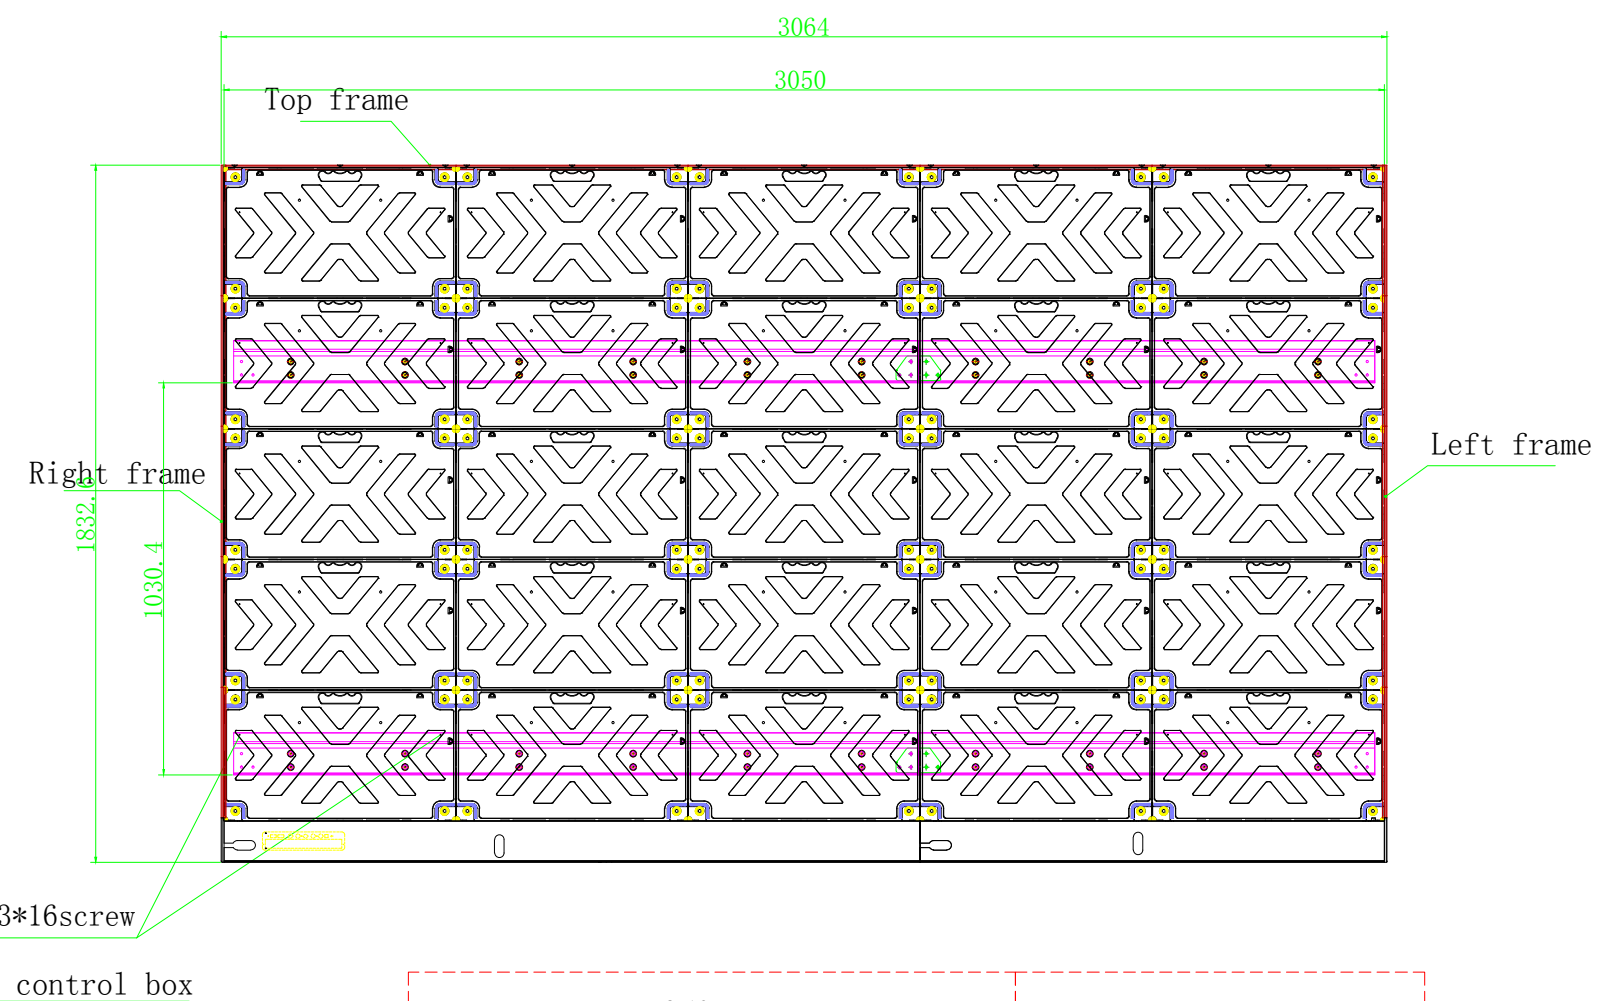
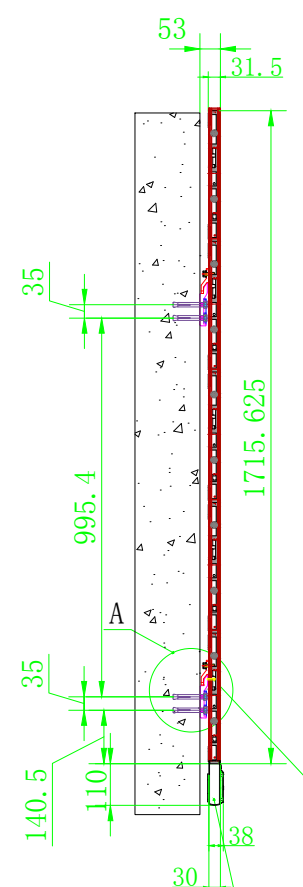


MARK	DATE	DESCRIPTION	NAME
△	XXXX. XX. XX		




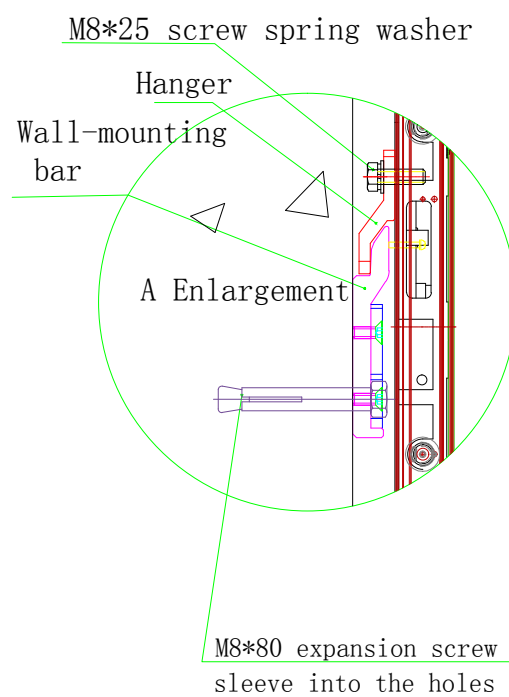


Installation Instruction

1. Install wall-mounting bar
 - 1) Locate the positions to drill holes for wall-mounting bars according to the size of mounting holes on the installation diagram. Then draw dowel points on the wall based on the height requirement of screen to ground on site, and at least 16 points are required for upper and lower wall-mounting bars. (It is suggested to apply six holes for 600*3 wall-mounting bars and four holes for 600*2 wall-mounting bars during installation and reserve other holes for installation. Use level instrument to ensure the precision of each drilling point)
 - 2) Drill M8*80 expansion bolt mounting holes at the position of the drawing points by electric drill. The diameter of each mounting hole shall be 10mm, and the positional accuracy beside two holes shall not exceed 1mm. (Other reserved holes can be used if the drilling hole is deviated or against the internal reinforcement of the wall)
 - 3) Install wall-mounting bars with M8*80 expansion bolts. Fix two wall-mounting bars with six M6*16 connection plates.
 - 4) Check whether the wall-mounting bar is properly installed, which requires: a. levelness; b. whether the spacing between the two rows of wall-mounting bars is correct, which can be checked and adjusted by loosening the expansion bolt and gently pushing it to the level. And then tighten the wall-mounting bar with screws.
2. Install cabinet
 - 1) Hang the cabinet row on the wall-mounting bars according to arranged positions from the bottom to the top, and from the middle to the sides. The position of each cabinet row should not be exchanged.
 - 2) In order to prevent the screen from shaking back and forth, please fasten cabinet to the wall-mounting bar by using M3*16 screws on several drilling holes.
3. Install left and right cover strips
 - 1) The left and right cover strips shall be snapped into the side spring dowel pin holes (spring dowel pin shall be removed from the left side of the screen), the cover strip with "R" is the right one, and "L" is the left one.
4. Screen wiring

Connect power cords and signal cables according to the system wiring diagram.
5. Install modules

Refer to the Product Manual for details.

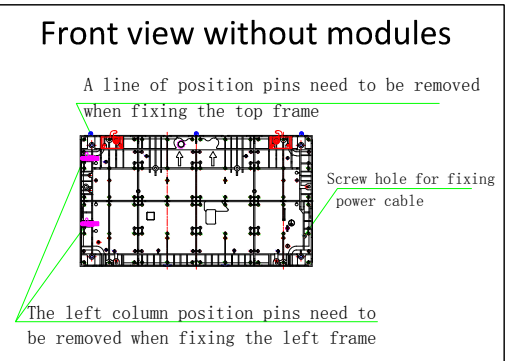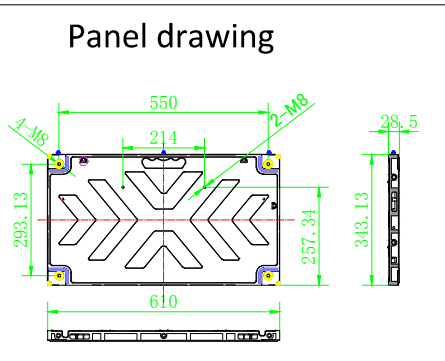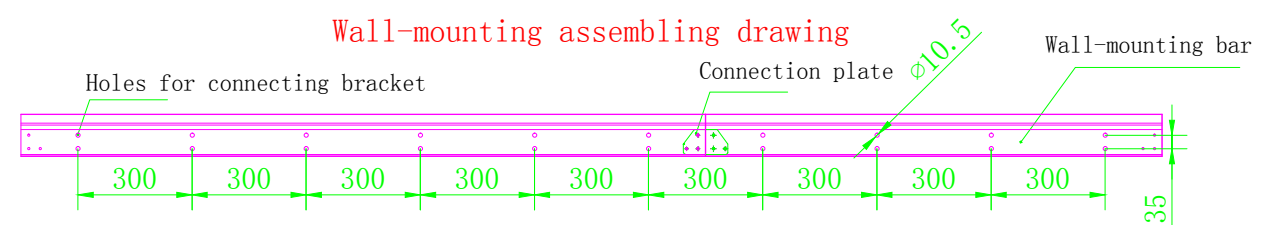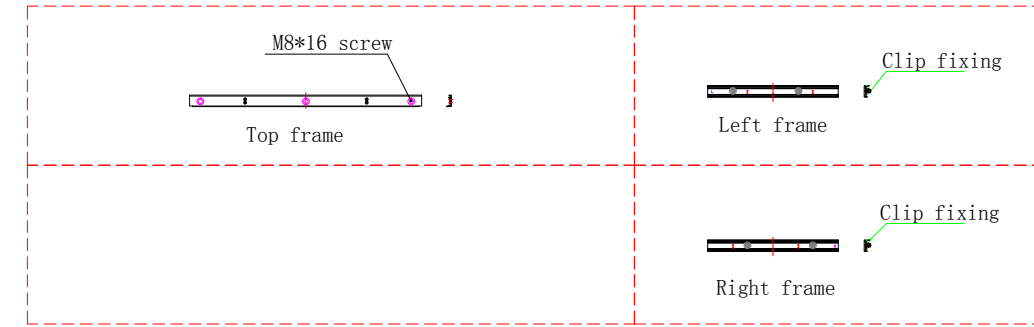

138 inch(2 PLUS) wall-hung type drawing					QS1. 216. 2467-AZ-EN		
Revise sign	Quantity	Renumber	Signature	Date	Grade Remark	Weight	Ratio
Designer		SJ	SJT				1:1
Assessor		SH	SHT				
Countersign		HQ	HQT				
Technologist		GY	GYT				
Standardization		BZH	BZHT		MATERIAL	FINISH	
Supervisor		SD	SDT		Page 1	1 Page In All	
Approval		PZ	PZT		Versions: V1.1		